


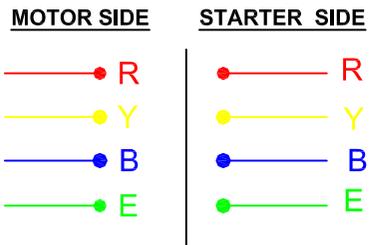


DOL / ATS

4 CORE POWER CABLE




DOL / ATS (7 CORE CABLE)

7 CORE POWER CABLE

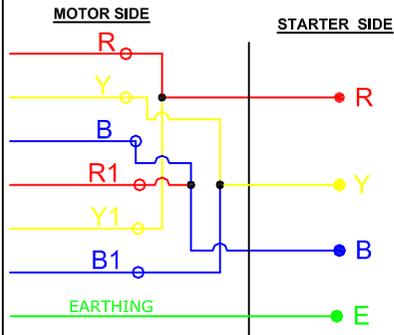


STAR - DELTA

7 CORE POWER CABLE

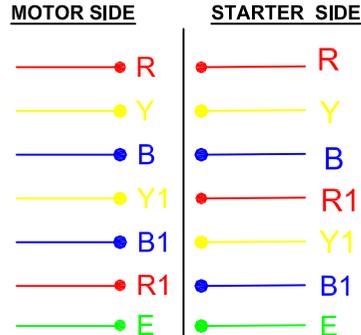


VFD (8 RUN 4 CORE CABLE)

STARTER SIDE

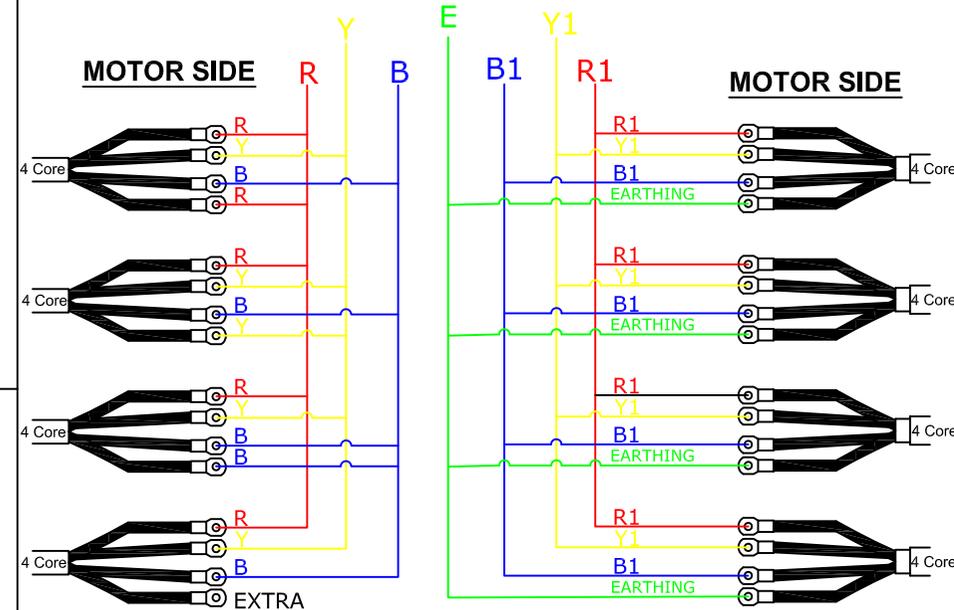


DOL / ATS / SOFT STARTER / VFD

3 CORE + 4 CORE POWER CABLES

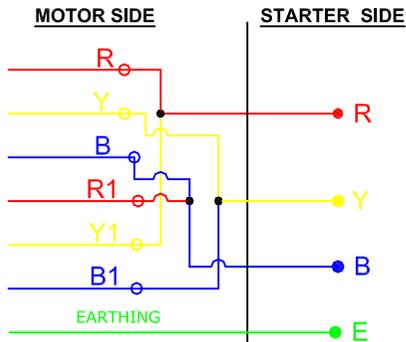


ATS / SOFT STARTER / VFD (7 RUN 4 CORE CABLE)

MOTOR SIDE STARTER SIDE

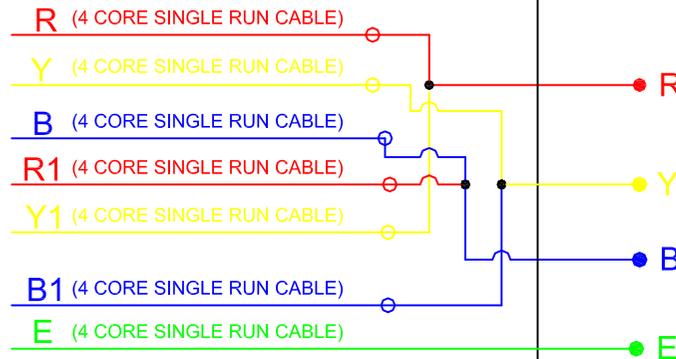

STAR - DELTA

3 CORE + 4 CORE POWER CABLES

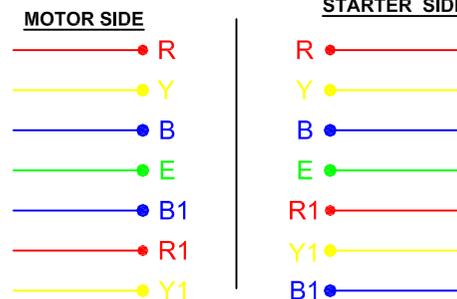


CONTACT DETAILS :

AQUA MACHINERIES PRIVATE LIMITED

Survey No. 442/2, 504/1 & 504/2, Near Haridarshan Estate, Near Express Highway, Ramol, Ahmedabad-382 445, Gujarat , India.

Email : Service@aquapumps.com Mobil(m) : +919016753328 / +919825951116

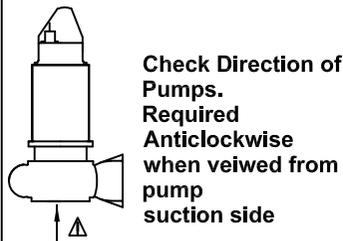


REMARKS:


1. INTERCHANGE 2 COMPLETE PHASE OF MOTOR IN PANEL IF MOTOR RUNS CLOCK WISE.
2. DO NOT RUN MOTOR DRY MORE THAN 30 SECONDS (SVT / AVT PUMPS MUST NOT RUN DRY IN ANY CIRCUMSTANCES)
3. ENSURE IMPELLER FREENESS BY HAND BEFORE STARTING IF PUMP IS LYING IDEAL CONDITION FOR MORE THAN 3 MONTHS.
4. TAKE INSULATION (MEGGER)TEST OF MOTOR BEFORE CABLE CONNECTING TO PANEL. READING MUST BE MORE THAT 100 MEGA OHM.
5. ENSURE SUMP IS CLEAR FOR INSTALL THE PUMP. CLOGGING MATERIAL MUST BE REMOVE FROM SUMP.




ATS / SOFT STARTER / VFD (4 + 4 & 3 + 3 CORE CABLE)

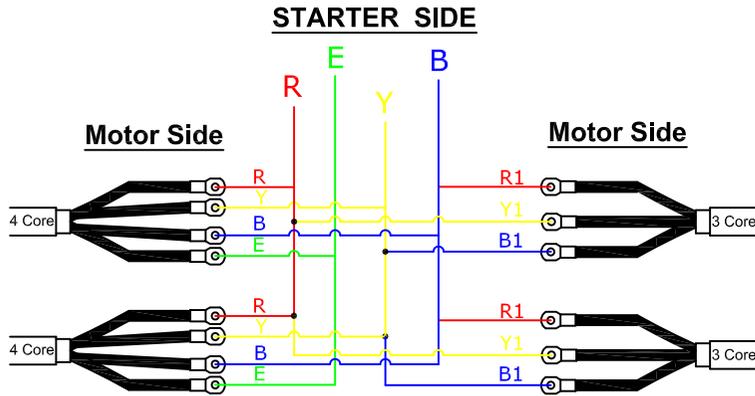


**STAR - DELTA
3+3 CORE and 4+4 CORE POWER CABLES**

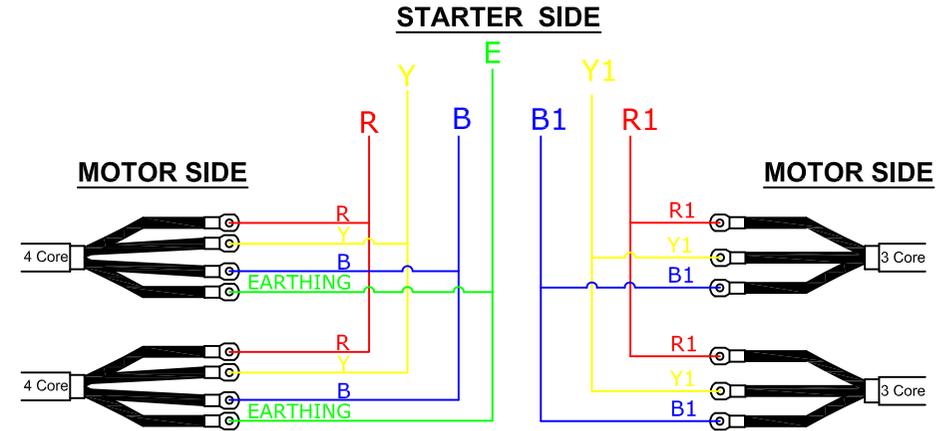

ATS / SOFT STARTER / VFD (4 + 4 + 4 & 3 + 3 + 3 CORE CABLE)

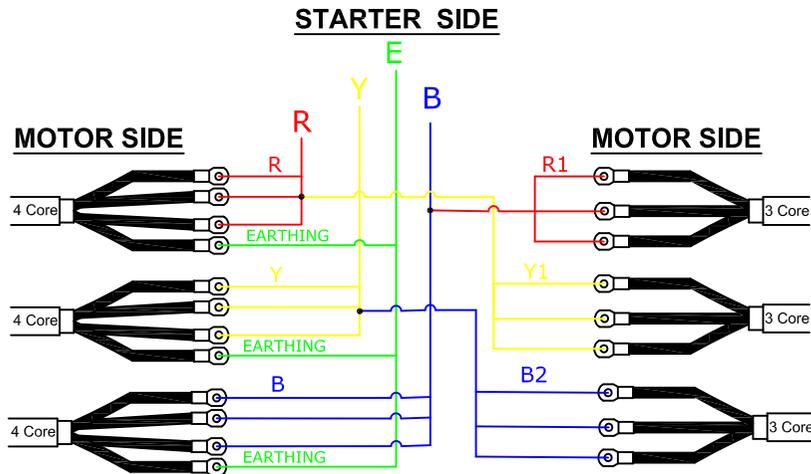

STAR-DELTA (4 + 4 + 4 & 3 + 3 + 3 CORE CABLE)

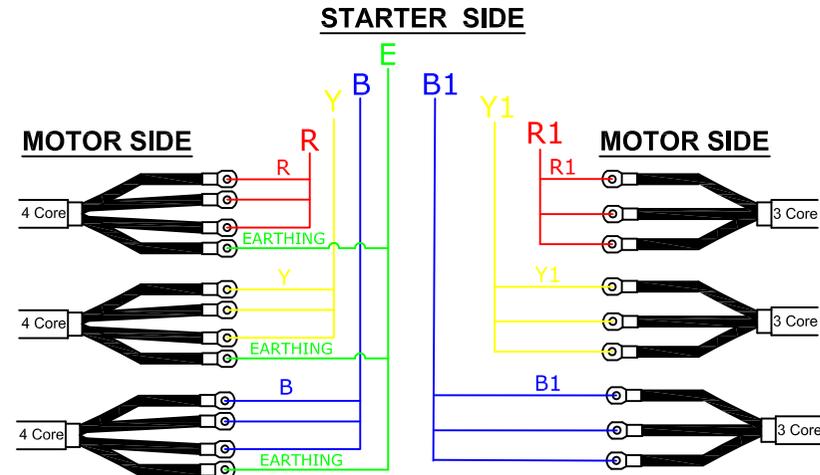


CONTACT DETAILS :

AQUA MACHINERIES PRIVATE LIMITED

Survey No. 442/2, 504/1 & 504/2, Near Haridarshan Estate, Near Express Highway, Ramol, Ahmedabad-382 445, Gujarat , India.

Email : Service@aquapumps.com Mobil(m) : +919016753328 / +919825951116

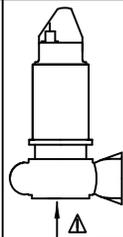

Check Direction of Pumps. Required Anticlockwise when viewed from pump suction side

REMARKS:

1. INTERCHANGE 2 COMPLETE PHASE OF MOTOR IN PANEL IF MOTOR RUNS CLOCK WISE.
2. DO NOT RUN MOTOR DRY MORE THAN 30 SECONDS (SVT / AVT PUMPS MUST NOT RUN DRY IN ANY CIRCUMSTANCES)
3. ENSURE IMPELLER FREENESS BY HAND BEFORE STARTING IF PUMP IS LYING IDEAL CONDITION FOR MORE THAN 3 MONTHS.
4. TAKE INSULATION (MEGGER)TEST OF MOTOR BEFORE CABLE CONNECTING TO PANEL. READING MUST BE MORE THAT 100 MEGA OHM.
5. ENSURE SUMP IS CLEAR FOR INSTALL THE PUMP. CLOGGING MATERIAL MUST BE REMOVE FROM SUMP.